



Security camera video



Quick user guide

Search, playback and export

How to search and playback video

- 1 From **LIVE** view screen click right mouse
- 2 Choose **Menu**
- 3 If requested draw unlock pattern to enter system options
- 4 Click on **Playback icon**
 the playback screen will be blank
- 5 On left-hand side select the camera/s you wish to search footage from
- 6 On the calendar below choose date to be searched. Double click on the date.
(Please note: ONLY days highlighted blue can be searched)
- 7 The screen should now display an image for the camera selected. If not press the **PLAY** arrow at bottom of screen
- 8 Towards bottom left of screen there is a **RED** bar - click and hold left button on mouse and drag this bar to the approximate time of incident. (Use Speed UP/Speed DOWN arrows to review footage quickly)
- 9 If the footage is to be exported, see next column.
 If not, click **Live View icon** at top of screen
You will be returned to the **LIVE** view screen

How to export footage onto USB drive

- 1 Make a note of the **START** and **END** time of the recorded clip you wish to export
- 2 Ensure a USB Thumb drive is inserted in the USB port at either Front or Rear of recorder (location of port is model dependant)
- 3 Pause the playback at the start time of the clip to be exported
- 4 Move the mouse slightly into the image and you will see the **Scissor icon**
 Press the Scissor icon and select the **START** and **END** time of clip you wish to be copied. Press Save
- 5 Click the **'Player'** button, then OK
- 6 You will now see a box called **EXPORT**. At the top of screen, you will see the clip you have copied including the date, time and size of video file. Ensure the **Device Name** field is populated (this is the name of USB thumb drive). If not, check USB Thumb drive is inserted correctly and repeat step 5 and 6
- 7 If all correct, click **SAVE**
- 8 System will display an on-screen display showing the 'backup' occurring. Wait until it displays 100% before removing USB Thumb Drive
- 9 Click anywhere on the screen to return to the Playback screen. Repeat steps 1 to 7 if further video clips are to be exported
- 10 Click on **Live View icon**  to exit Playback mode

For further information
call 1300 360 504

